PHILIPS

14 PT300 A

PHILIPS

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

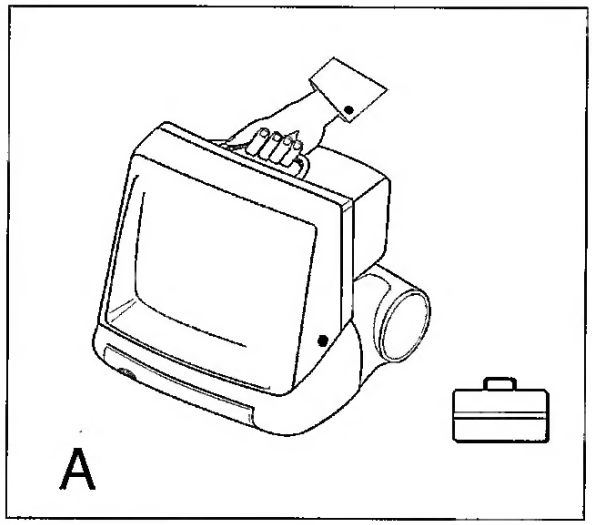

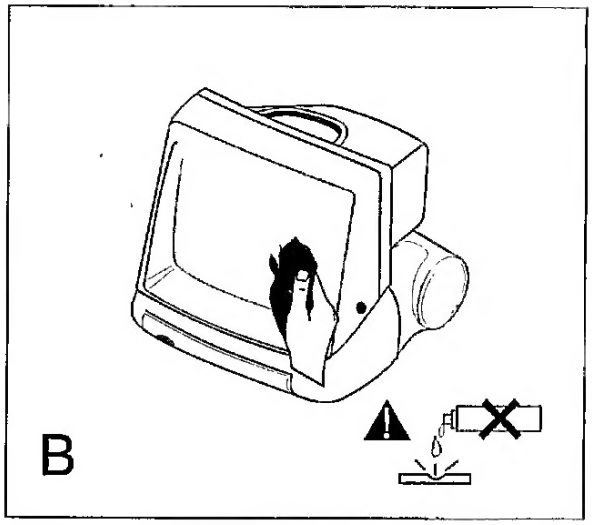

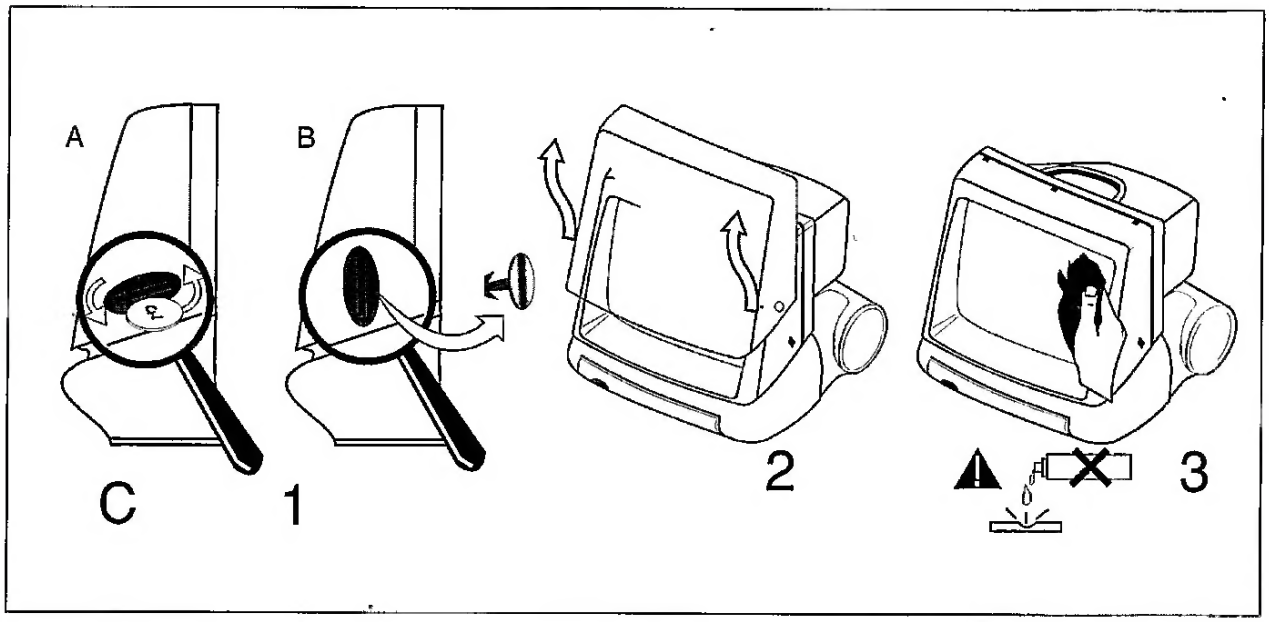

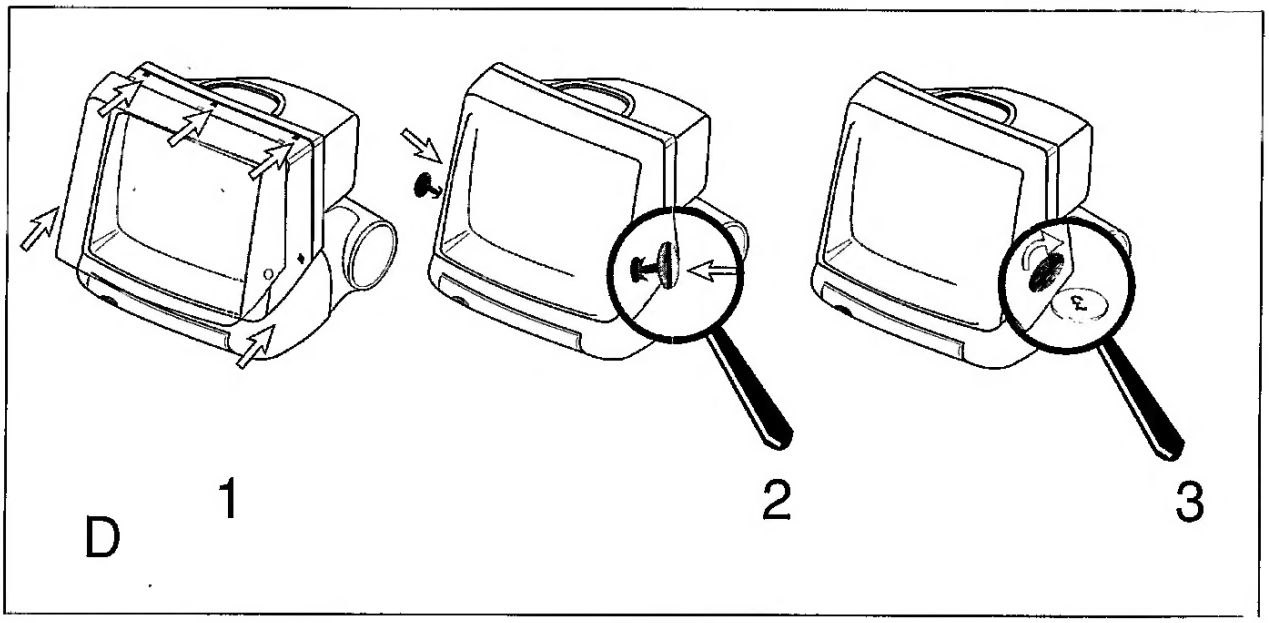

Downloaded from www.Manualslib.com manuals search engine

Installation

Follow the instructions very closely and step by step.
- ◦ This circle in front of a sentence indicates that you have to do something.
- ▹ This arrow in front of a sentence indicates the result of what you have done.

This bar in front of a sentence indicates help information.

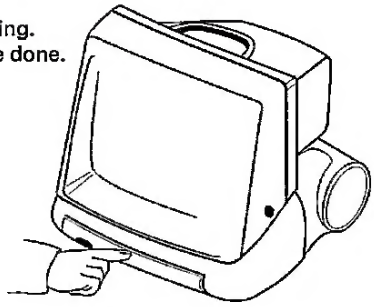

Carry the TV as shown by drawing A on the internal cover.

Place the TV on a solid base (e.g. a TV/video cabinet).
Leave at least 3 cm around each side of the TV for ventilation.

The control buttons needed for adjusting the TV are located behind the control panel cover on the front of the TV.
To open, simply press on the middle of the panel cover.

The TV can only operate at a mains voltage of 220/240 V~, 50 Hz; consult your dealer if the mains supply is different.

- ◦ Connect the TV to the mains supply socket.
- ◦ Connect the aerial (indoor or outdoor) plug to the socket on the back of the TV.

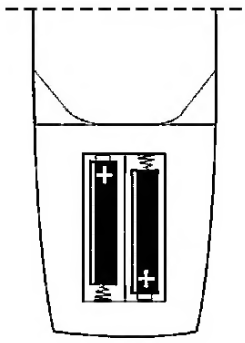

Small screen TV's are equipped with a high performance indoor aerial, nevertheless in some circumstances (specific regions or if surrounded by high buildings) reception problems could occur. Further improvement of reception could be obtained by:
- Rotating or varying the angle of the aerial.
- Using other aerial executions.
- Connecting your TV to an outdoor aerial.

Remote control

- ◦ Remove the battery cover.
- ◦ Insert the batteries, as indicated on the remote control.
- ◦ Replace the battery cover.

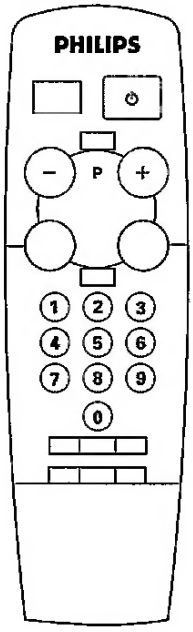

Switching TV on

- ◦ Press **POWER** on the front of the TV.
- ▹ The TV is switched on.
  Does a red light on the TV light up? Then the TV is on Stand-by.
- ◦ Press **P** — oder + or a digit button on the remote control, or **PROGRAM** — or + on the TV, to switch on the TV again.

Stand-by

- ◦ By pressing ⏻ on the remote control you can temporarily switch the TV off.
- ▹ A red light on the TV lights up.
- ◦ Press **P** — oder + or a digit button on the remote control, or **PROGRAM** — or + on the TV, to switch on the TV again.

Automatic switch off

If after a period of 15 minutes no aerial signal is received, the TV automatically switches to Stand-by.

Switch off your TV overnight instead of leaving it on Stand-by. You save energy end the picture tube is demagnetised which favours good picture quality.

Downloaded from www.Manualslib.com manuals search engine

2 Storing TV channels

39 TV channels can be stored on program numbers. Write down the TV channels and the assigned program numbers while storing.
Follow carefully steps **a, b, c, d, e.**

a.
- Press ◇ **INSTALL.**
- ▷ The current program number and the TV-system are displayed on the screen. You cen select e different TV-system for each seperate program number.

b.

You can select among the following TV-systems:

Region	TV-system	Used in
EUROPE	PAL BG - SECAM BG	West European countries except Frence, except United Kingdom and Ireland.
UK	PAL I	United Kingdom and Ireland.
FRANCE	SECAM L L'	France.

- Press **SYSTEM** one or more times to select the required TV-system

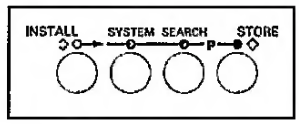

c.
- Press **SEARCH** to start the search.
- ▷ The TV automatically searches until a TV channel is found.
- If you went to continue searching for a specific TV channel then press **SEARCH** again.

d.
- Press **PROGRAM** — or + to select the program number (1 to 39) where you want to store the TV channel.
- ▷ The selected program number is displayed on the screen.

e.
- Press ◇ **STORE** to store this selection.

REPEAT Repeat steps **a, b, c, d, e** until all the TV channels you require heve been stored on program numbers.

Auto Programming

The Auto Programming function can be used to find and store all available TV channels broedcasted in the TV-system FRANCE (SECAM L L' - France).

After Auto Programming is started, the TV starts searching for a channel.
If a channel is found, it will be automatically stored on program number 1. Searching will start again automatically. If another channel is found, it will be stored on program 2, etc.

At the end of the Auto Programming cycle the TV switches to progrem 1.

- Press ◇ **INSTALL** .
- Press **SEARCH** longer than 4 seconds to start the Auto Programming.

If you want to stop the Auto Programming, press ◇ **INSTALL.**

Downloaded from www.Manualslib.com manuals search engine

Operation

ENGLISH

On Screen Display

The On Screen Display information allows you to see the program number on which a TV channel is stored, the time left, if the sleep-timer is used and the volume bar if the volume is adjusted.

- Press ⊡ to display information on the screen.
- Press ⊡ again to switch off information.

Selecting TV channels

- Press **P** — oder + or press one or two digit buttons on the remote control.
  or
- Press **PROGRAM** — or + on the TV.

Volume control

- Press ◿ — or + on the remote control.
  or
- Press **VOLUME** — or + on the TV.

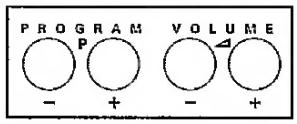

Interrupting the sound

- Press 🔇 to switch off the sound.
- Press 🔇 again or ◿ + to switch on the sound.

Changing picture settings

With the menu on the screen you can adjust the picture settings.

- Press MENU
- ▹ BRIGHTNESS appears, adjust the brightness by pressing **down** or **up**.
- Press MENU
- ▹ CONTRAST appears, adjust the contrast by pressing **down** or **up**.
- Press MENU
- ▹ COLOUR appears, adjust the colour by pressing **down** or **up**.
- Press MENU
- ▹ The menu disappears.

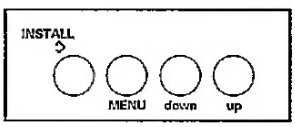

You can also use ☼ — or + on the remote control to adjust the brightness and ◐ — or + on the remote control to adjust the colour.

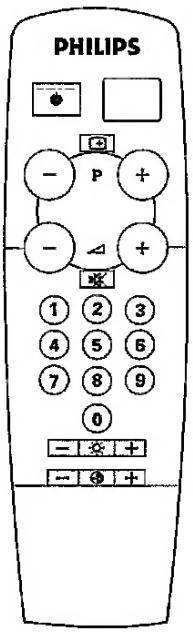

Storing personal preferences

Picture and sound settings have certain values when switching on the TV. You can change these values according to your personal preference.

- Adjust the picture and sound settings according to your personal preference.
- Press ◇ **INSTALL** twice to store your personal preference.

Sleep-timer

With this feature you can select a time period after which the TV switches automatically to Stand-by mode.

- Press ⏻ until the required time period is displayed on the screen.
  This time period can be set in steps of 15 minutes starting from 90 minutes downwards. The count-down starts immediately after the time period is selected. You can see the remaining time by pressing ⊡.
  During the final minute of the selected time period, the seconds remaining begin to "count down" on the screen, informing you that the TV is going to switch off. At the end of this time period the TV switches to Stand-by mode.

If you want to stop the "Sleep-timer" press ⏻ until the selected time period displayed on the screen is "00".

Downloaded from www.Manualslib.com manuals search engine

Peripheral equipment

Always read the operating manual supplied with your video recorder or other electronic equipment first.

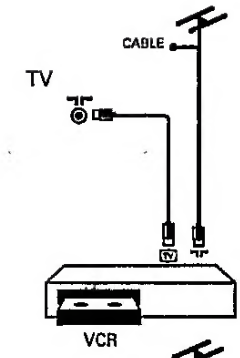

Aerial connection

- Unplug the aerial plug from your TV and plug it into the aerial input ⌐⊩ of your video recorder.
- Connect an aerial cable to the output TV of your video recorder and to the aerial input ⌐⊩ of your TV.
  To store the signal of your video recorder on a TV program number refer to the section "Storing TV channels".

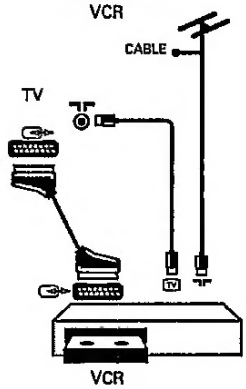

Euroconnection (scart) for e.g. videorecorder

You can connect for example a videorecorder or satellite tuner to your TV via the euroconnector socket on the back of the TV. Ask your dealer for the appropriate cable.

- Connect the eurocable to the euroconnector socket of your videorecorder or electronic equipment and to the euroconnector socket of your TV.
- Connect an eeriel ceble to the output TV of your video recorder end to the aerial input ⌐⊩ of your TV.
- Normally if the electronic equipment is switched on, the picture will automatically appear on the TV screen; if not select program number 0.

Euroconnection (scart) for audio amplifier

An external audio amplifier can be used to listen to your sound. In this case you need a special euroconnector cable, provided with eudio out plugs. Ask your dealer for an appropriate cable.

- Connect the audio plugs into the audio input of your audio amplifier.
- Connect the euroconnector into the euroconnector socket of your TV.

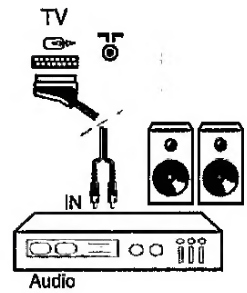

Connecting headphones

- Connect the headphones plug (impedance 8-1000 ohm; jack 3.5 mm.) to the 🎧 socket.
- ▷ The TV-loudspeaker is switched off automatically when the headphones are connected.

Screen panel

For cleaning the screen panel or other parts of the TV, never use alcohol or other aggressive products.

- To clean the TV-screen, remove the screen panel as shown by drawing C on the inside cover.
- Replace the screen panel as shown by drawing D on the inside cover.

Tips

Poor or no picture:

Are the plugs tightly connected to the aerial socket and are the connection facilities to any other installed TV in good condition?
If an indoor aerial is used, refer to the section "Installation" to improve the reception.

No picture from electronic equipment connected via eurocable:

Did you try selecting program 0 ?

No solution

Switch your TV off and on again with the **POWER** button.
Never attempt to repair a defective TV set yourself.
Switch off the TV and call your dealer or TV-technician when nothing helps or when:

- A white horizontal stripe appears across the whole screen.
- The red lamp below the screen starts blinking when no buttons are pressed on the remote control.

Downloaded from www.Manualslib.com manuals search engine

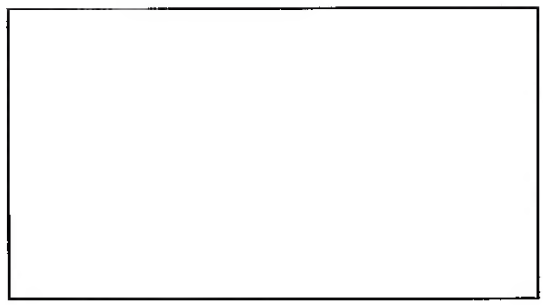

Printed in Italy by G.S.F. 93/6 5

14AA3326

RC 3119 105 2126.2

Downloaded from www.Manualslib.com manuals search engine